



Sukup Manufacturing Co.
1555 255th St, PO Box 677
Sheffield, IA USA 50475

Service Bulletin

Phone: 641.892.4222
Fax: 641.892.4629

Part # : L2087

Date: 08/26/2025

Page: 1 of 2

Email: info@sukup.com
Website: www.sukup.com

Subject: Replacing Motherboard Battery in QuadraTouch Pro Console

REVISIONS: Added instructions and photos showing removal and installation of battery.

Overview: Follow instructions below to replace battery (CR2032) for motherboard in QuadraTouch Pro console. Image 1 shows message that will be displayed if battery has failed. Images 2 - 5 show battery replacement.

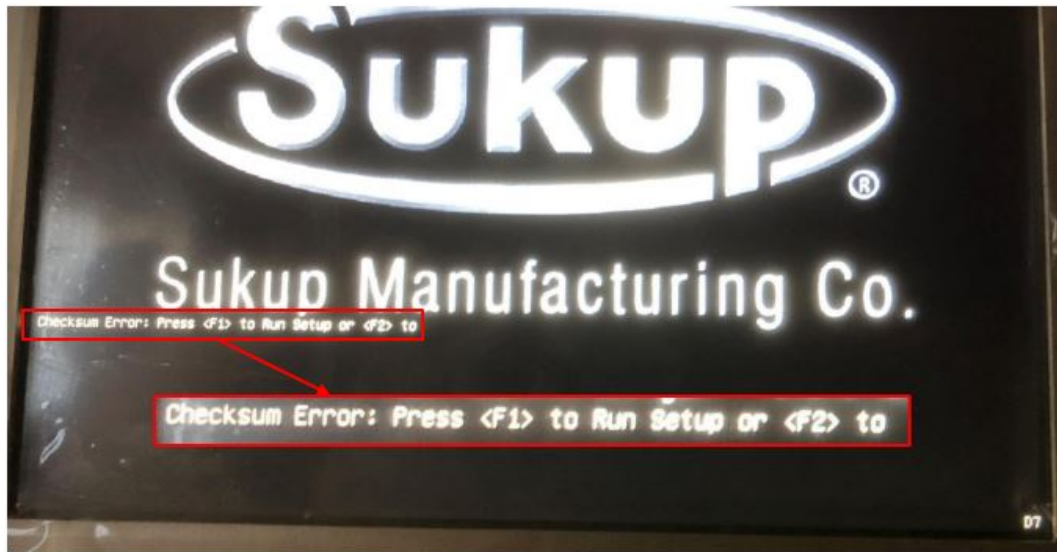


Image 1 – Message displayed on touch-screen if motherboard battery fails

Instructions for battery removal & replacement:

1. Locate motherboard battery (Circled in Image 2) after disconnecting power to console and opening back panel.



Image 2 – Battery location (circled)

2. Carefully move spring retaining clip away from battery using a small tool. See Image 3. **(DO NOT PRY ON PLASTIC TABS OR BATTERY.)** Battery will pop out once it clears spring retaining clip.
3. Insert new battery under spring clip (circled in Image 4). Gently press battery toward clip as shown in Image 5 until it snaps under tabs shown at left in Image 4.
4. Reassemble QuadraTouch Pro console and connect power.

Instructions for Clearing Error Code:

5. Plug in a keyboard to any USB port on QuadraTouch Pro console.
6. Press F2 to proceed.
7. Follow prompts on touch-screen to clear error message. Touch-screen is ready for use.

NOTE: Error message should not re-appear unless new battery fails in future.

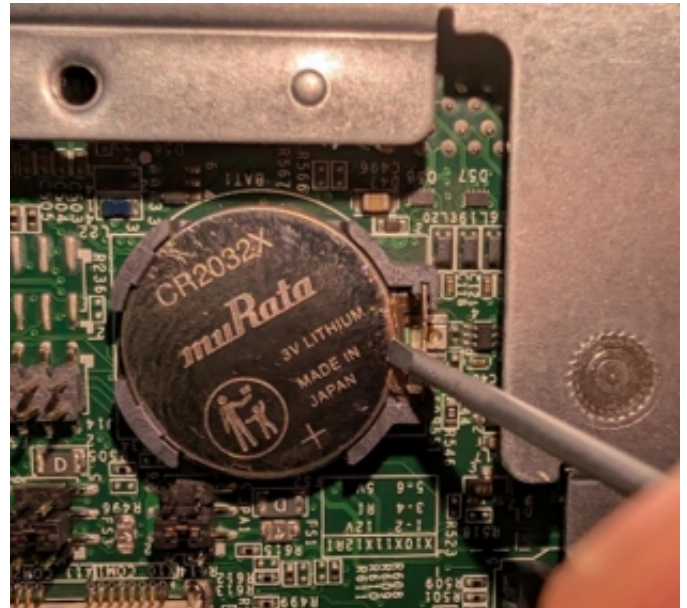


Image 3 - Moving spring retaining clip to remove battery

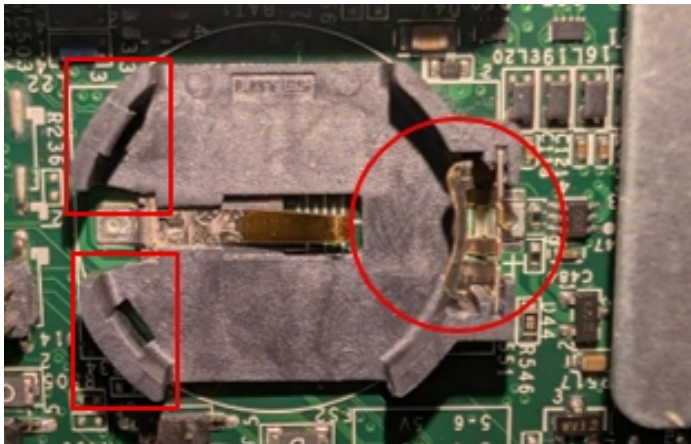


Image 4 - Battery retaining tabs (in rectangles) & spring retaining clip (circled)

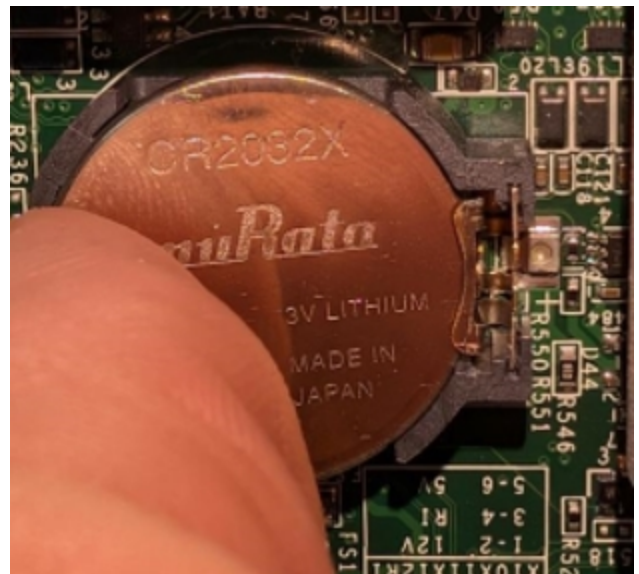


Image 5 - New battery installation